



NO.	PARTS CODE	PARTS NAME	QT	NO.	PARTS CODE	PARTS NAME	QT
11	FEE555-00	REBOUND SPRING GUIDE 1	1	1	FKE090-00	BOTTOM CASE ASSY	1
12	FEE290-03	REBOUND SPACER	1	1b	FEE239-01	BOTTOM STOPPER	1
13	FEE047	SUPPORT PLATE	1	1g	FAA125-30	DUST SEAL	2
14	FSB044	SUPPORT BOLT	1	2	FEE189-10	FORK NOSE	1
15	FKE091	PISTON ASSY	1	3	FSB115	CONNECT BOLT	1
16	FKE089-00	UPPER ASSY	1	4	FEE048-25	SUPPORT TUBE	1
17	FAA196	O RING	2	5	FEE359	REBOUND WASHER	1
18	FEE526	PISTON CAP	1	6	FEP052-10	REBOUND RUBBER	1
19	FKE072-01	AIR CAP ASSY	1	7	FEE555-20	REBOUND SPRING GUIDE 3	1
20	FKE076	VALVE CAP ASSY	1	8	FEP306	REBOUND SPRING 1	1
21	FUN006-15	DAMPER UNIT	1	9	FEE555-10	REBOUND SPRING GUIDE 2	1
22	FKE028-21	LO TOP CAP ASSY	1	10	FEP307	REBOUND SPRING 2	1
23	FEE288-10	LOCK OUT KNOB	1				