



| NO. | PARTS CODE | PARTS NAME       | QT |
|-----|------------|------------------|----|
| 1   | FKE322     | BOITOM CASE ASSY | 1  |
| 2   | FEE886     | SLIDER CUP       | 1  |
| 3   | FAA322     | DUST BOOT        | 1  |
| 4   | FEE887     | PUSH ROD         | 1  |
| 5   | FEE888     | SPRING GUIDE     | 1  |
| 6   | FEP509     | MAIN SPRING      | 1  |
| 7   | FSW024-10  | SPRING SEAT      | 1  |
| 8   | FPE033     | INNER TUBE       | 1  |
| 9   | FKE324     | ADJUSTER ASSY    | 1  |
| 10  | FKE321-10  | UPPER ASSY       | 1  |
| 11  | FEP508     | BUMPER           | 1  |
| 12  | FSW100     | SPACER           | 1  |
| 13  | FEP518     | REBOUND RUBBER   | 1  |
| 14  | FSW097     | REBOUND WASHER   | 1  |
| 15  | FSB162     | FIXING BOLT      | 1  |
| 16  | FSB166     | FIXING BOLT      | 1  |
| 17  | FSB161     | SET SCREW        | 1  |
| 18  | FSW096     | SLIDER WASHER    | 2  |
| 19  | FEE889     | METAL BUSHING    | 2  |
| 20  | FSP018     | HINGE PIN        | 1  |